






Thank you for purchasing the Heated grips - for electronic throttle.
 Before installing, please read the instructions carefully and keep them for future reference.


#### Attention!


- The Heated grips are made to work with DC 12 V only.
- For installation, follow the steps described in the instructions. Any damage caused by wrong installation shall be imputed to the user.
- Do not break or modify the wires. To avoid a short circuit, don't pull on any wires when installing.
- The interior examination or maintenance should be executed by our professionals only.
- $\triangle$  Some procedures must be followed to avoid damages caused by wrong installation.
- ⚠ WARNING! Some procedures must be followed to avoid damages to yourself or the public.
- **CAUTION!** Some procedures must be followed to avoid damages to the vehicle.

READ CAREFULLY! If any information dealt with in the instructions remains unclear, seek professional assistance.

#### 1 Accessories

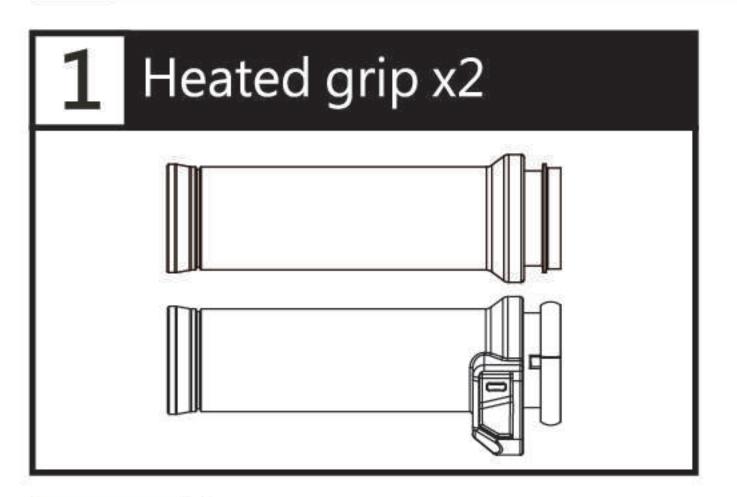

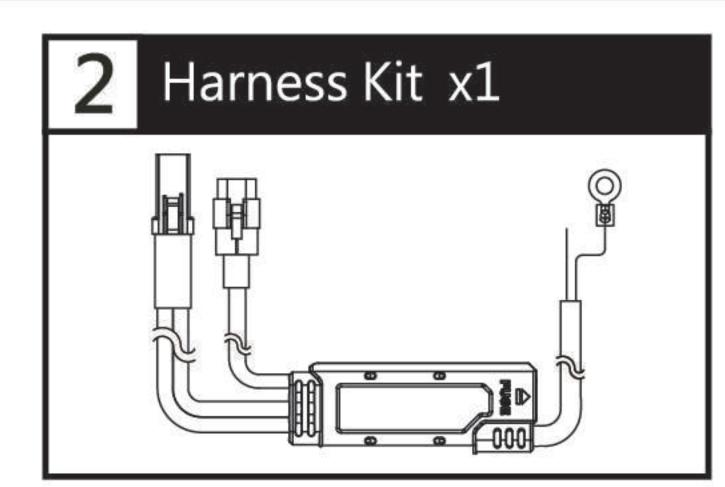


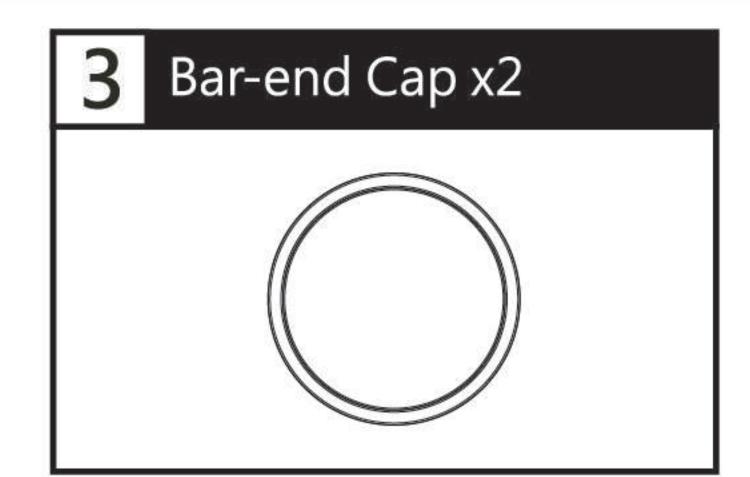


NOTE Contact your local distributor, if the items received in the box are not the same as the items listed above.

# 2-1 Practical installation instructions


# Heated grips installation procedure Figure 1 Figure 2

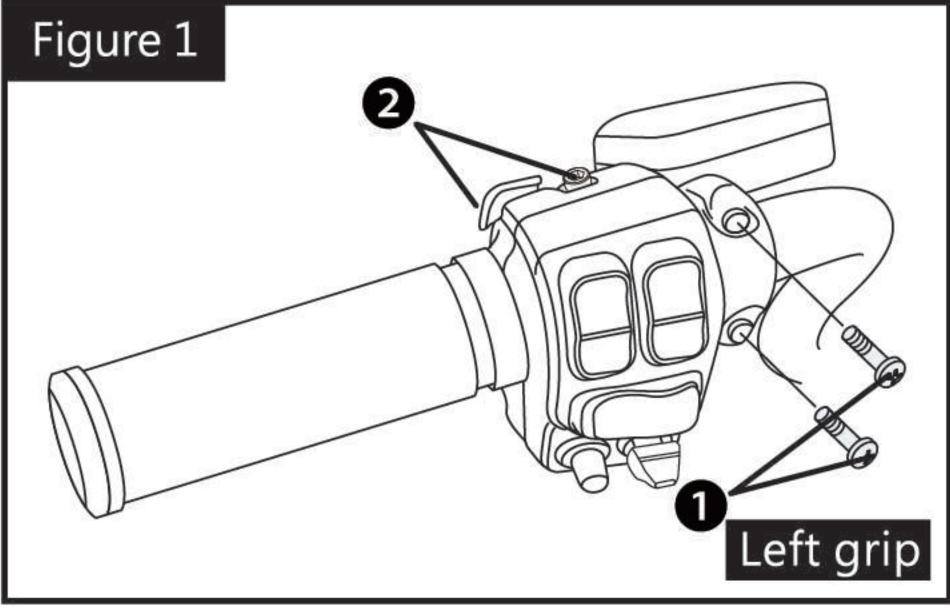


1. Use proper instrument to remove 1. Use proper instrument to remove 1. Use proper instrument to remove 2. The original screws x2 and loosen 2.

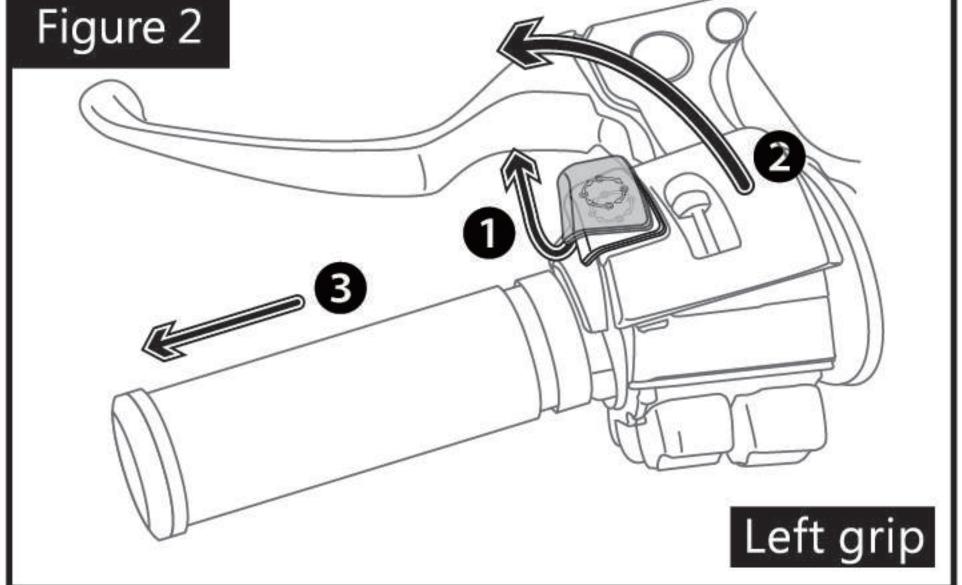

2. Pull 1 the function button, loosen2 the switch assembly, and remove 3 the original grip.

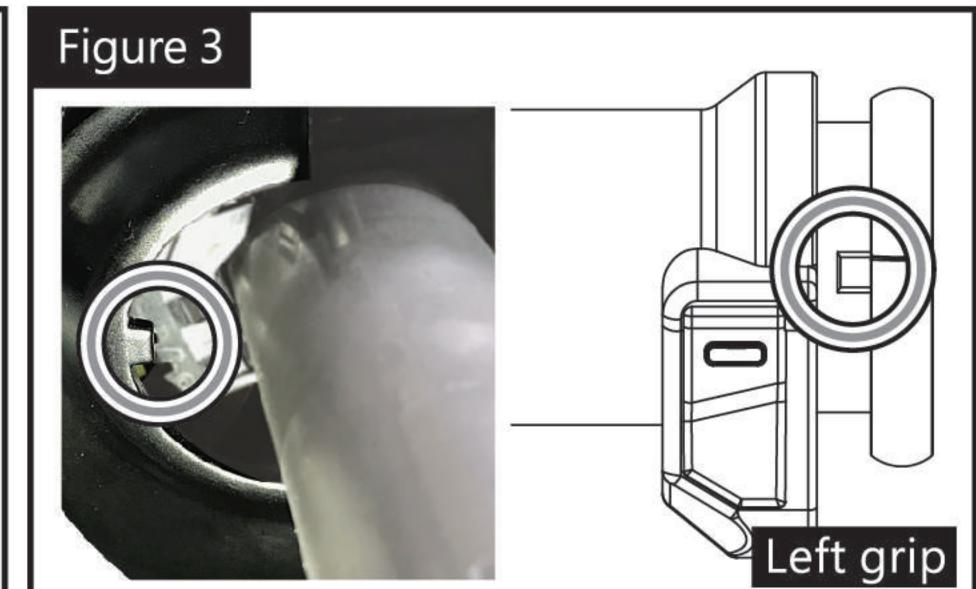


3. Make sure the grip fits the lock during installation.

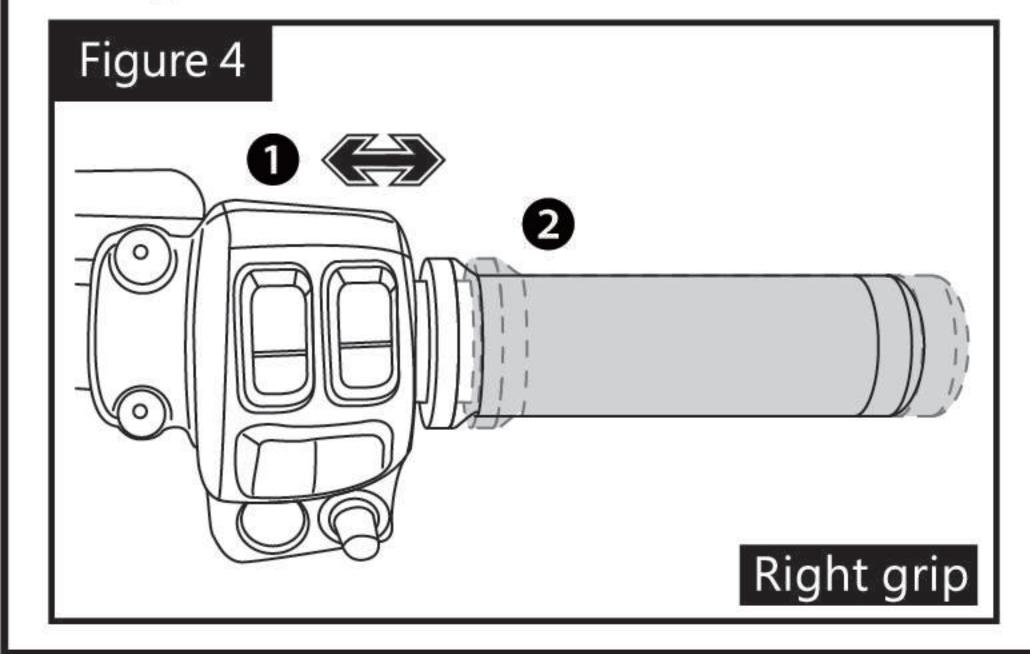


4. Adjust the location of **1** the power assembly to control the tightness of the **2** grip.


#### 2-2 Practical installation instructions

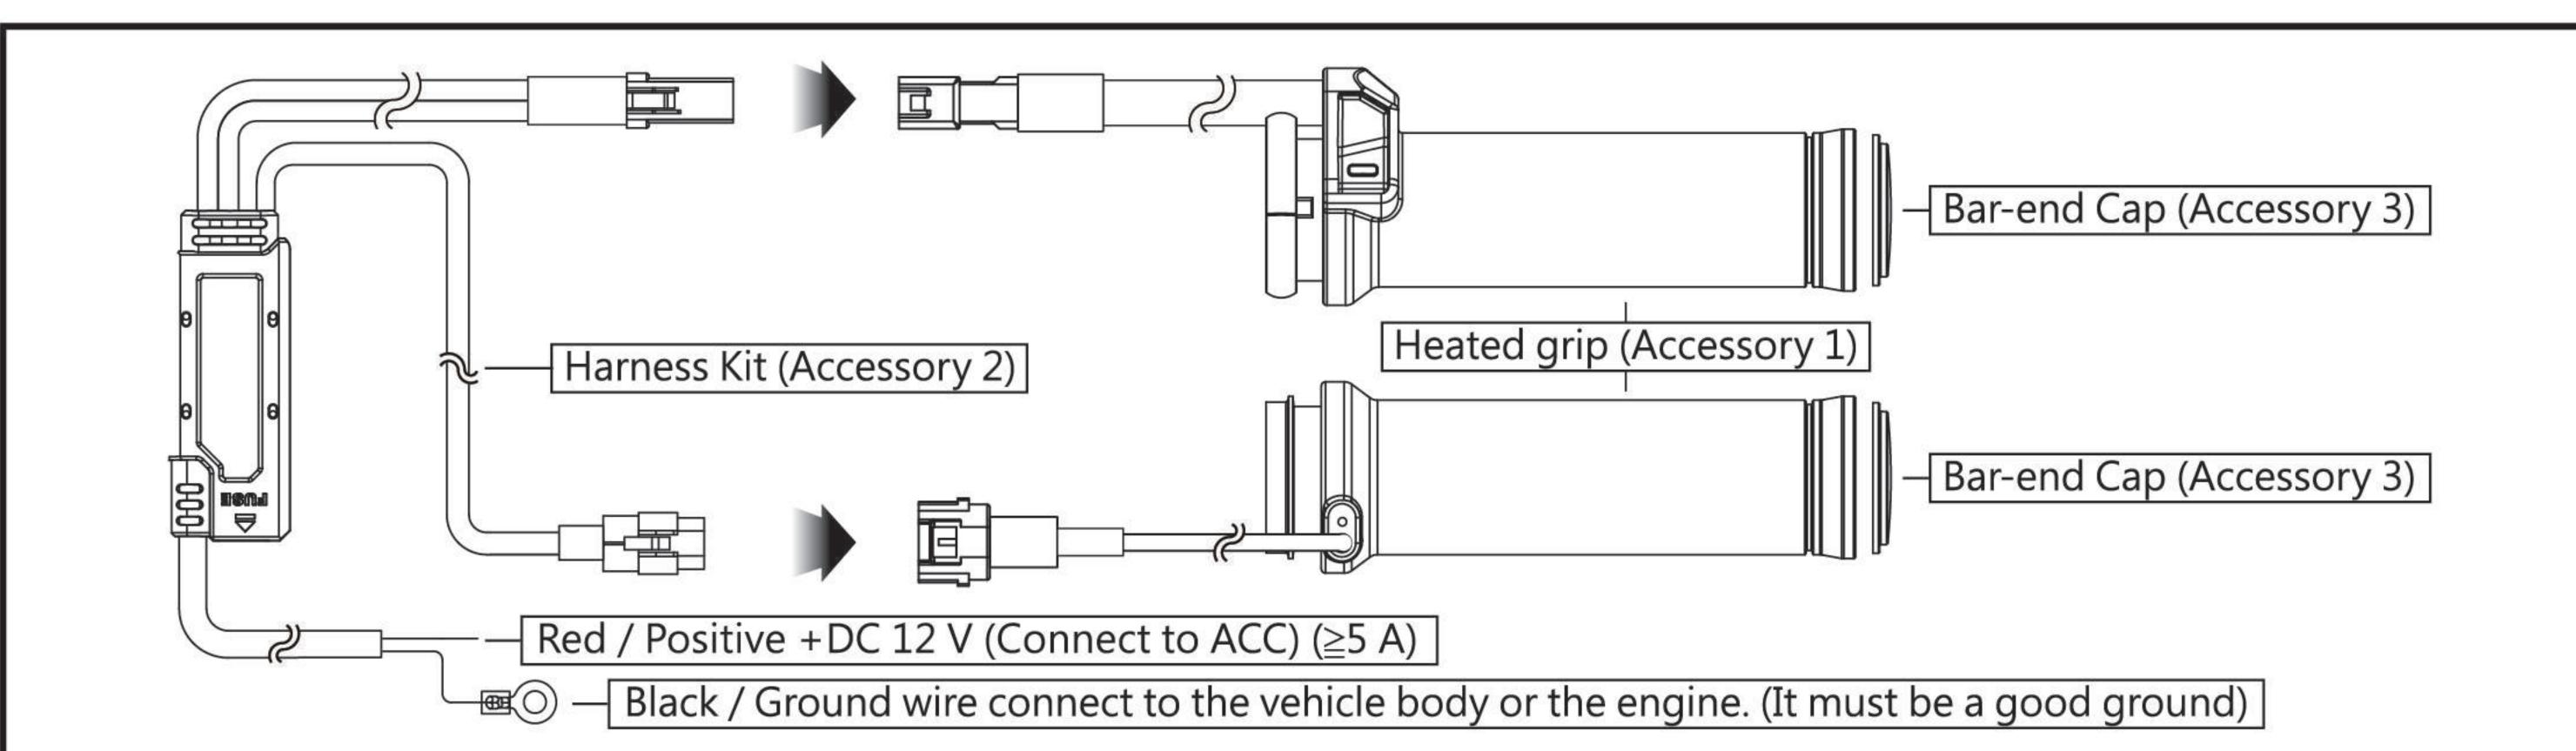

# 3 Heating Function Instruction

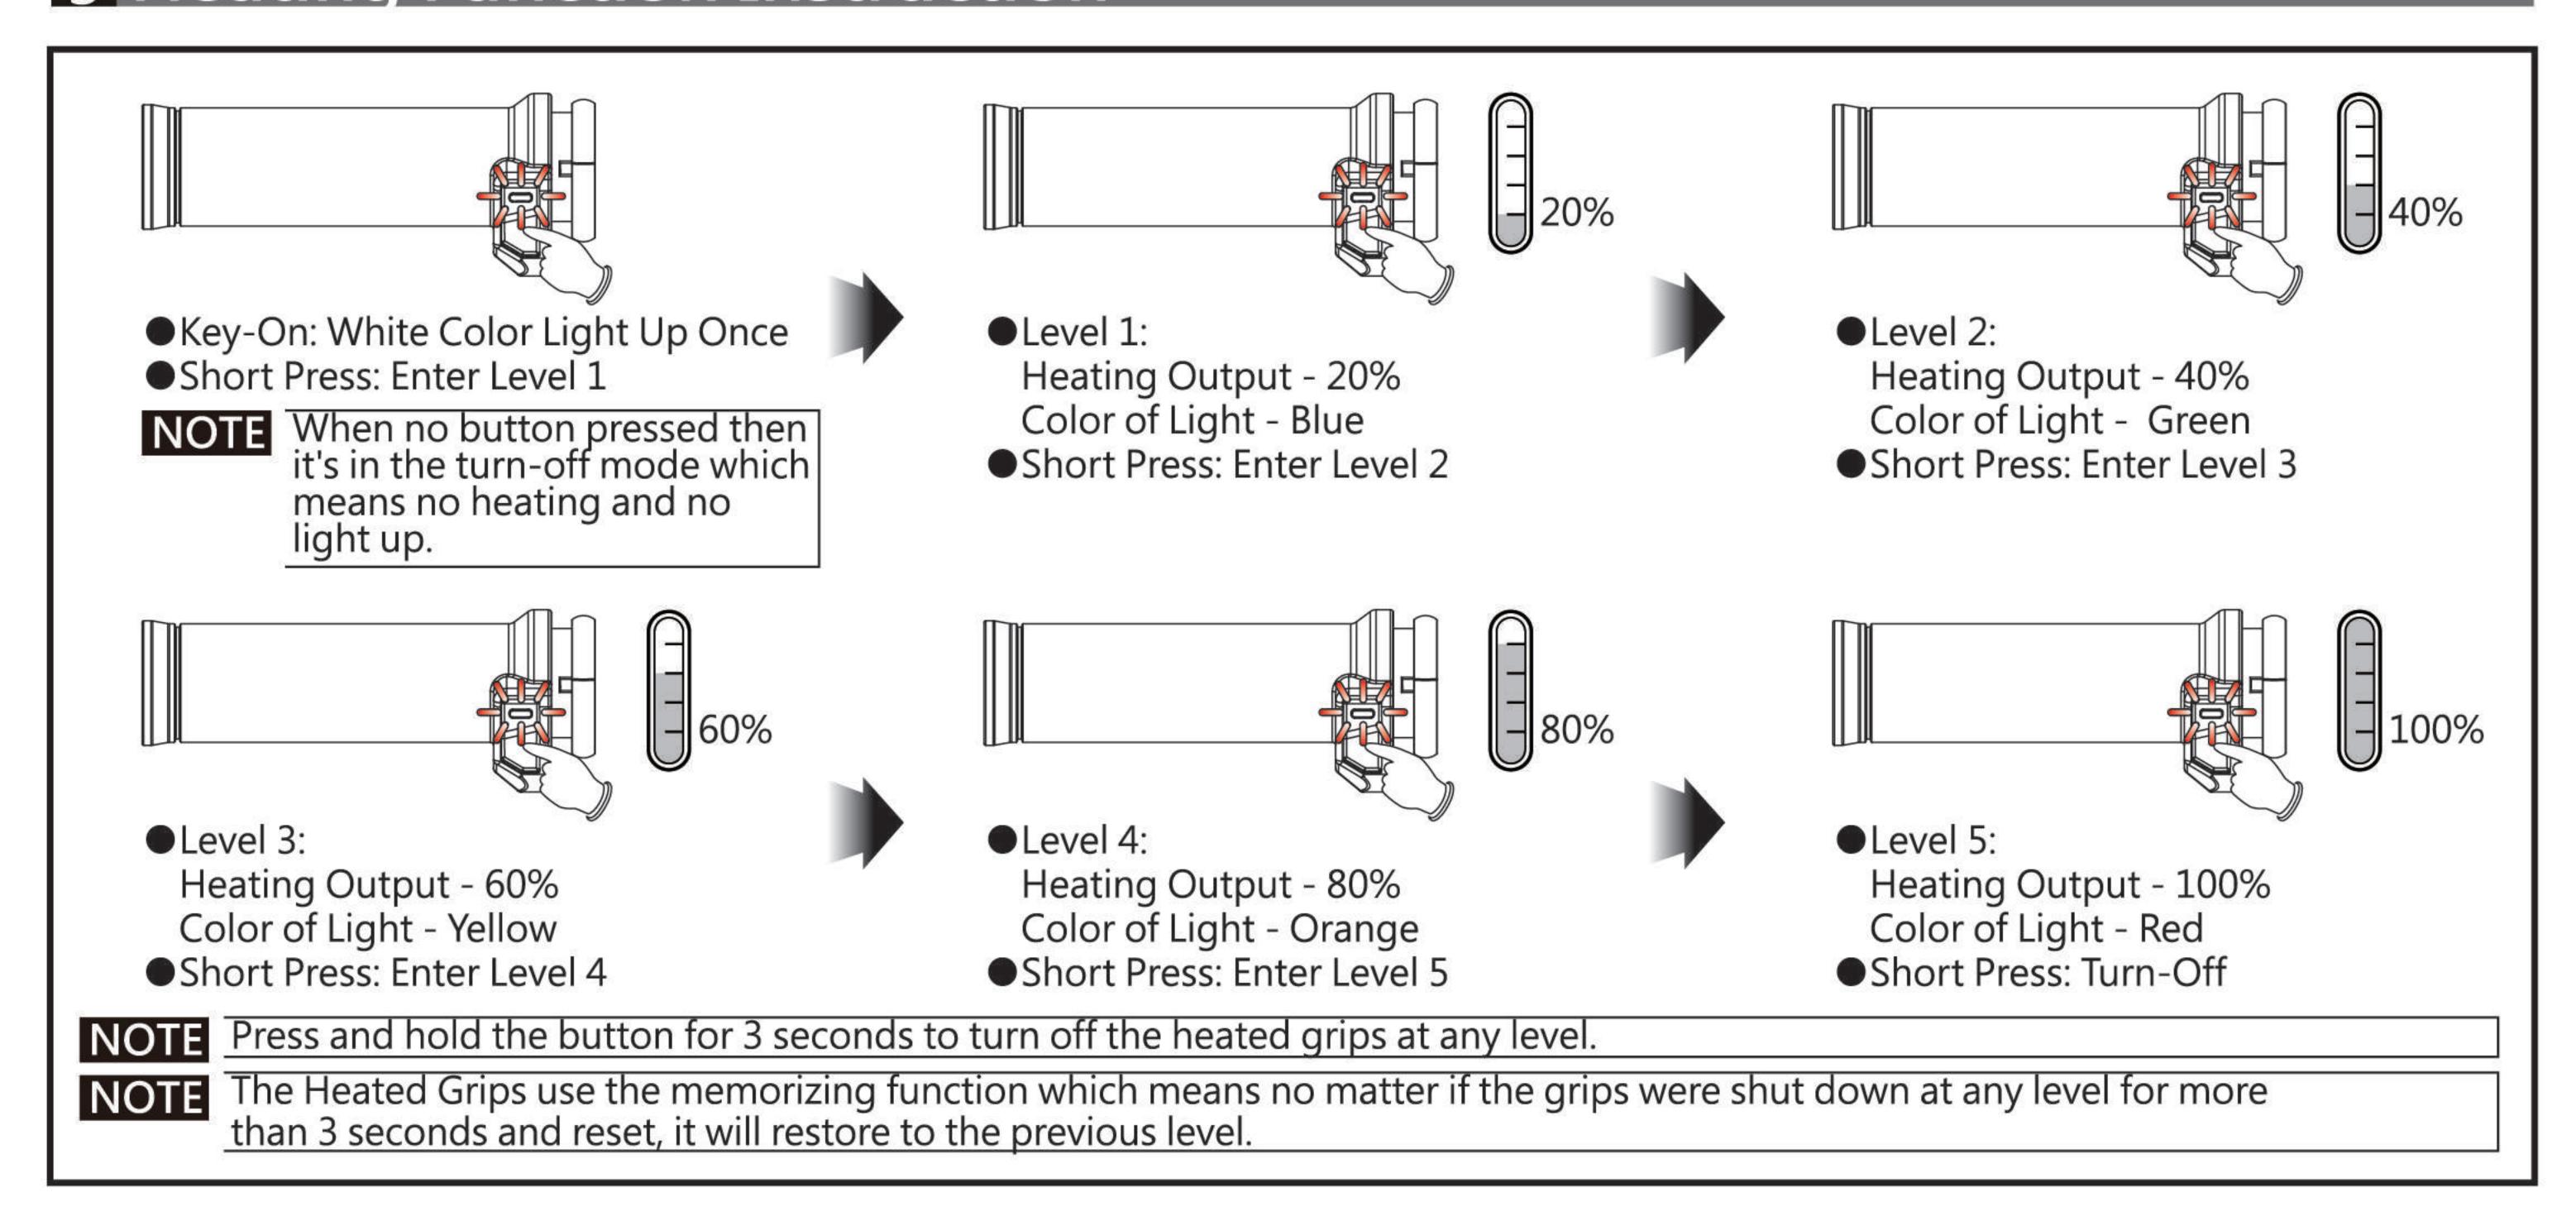


## 4 Heated Grip Testing Data

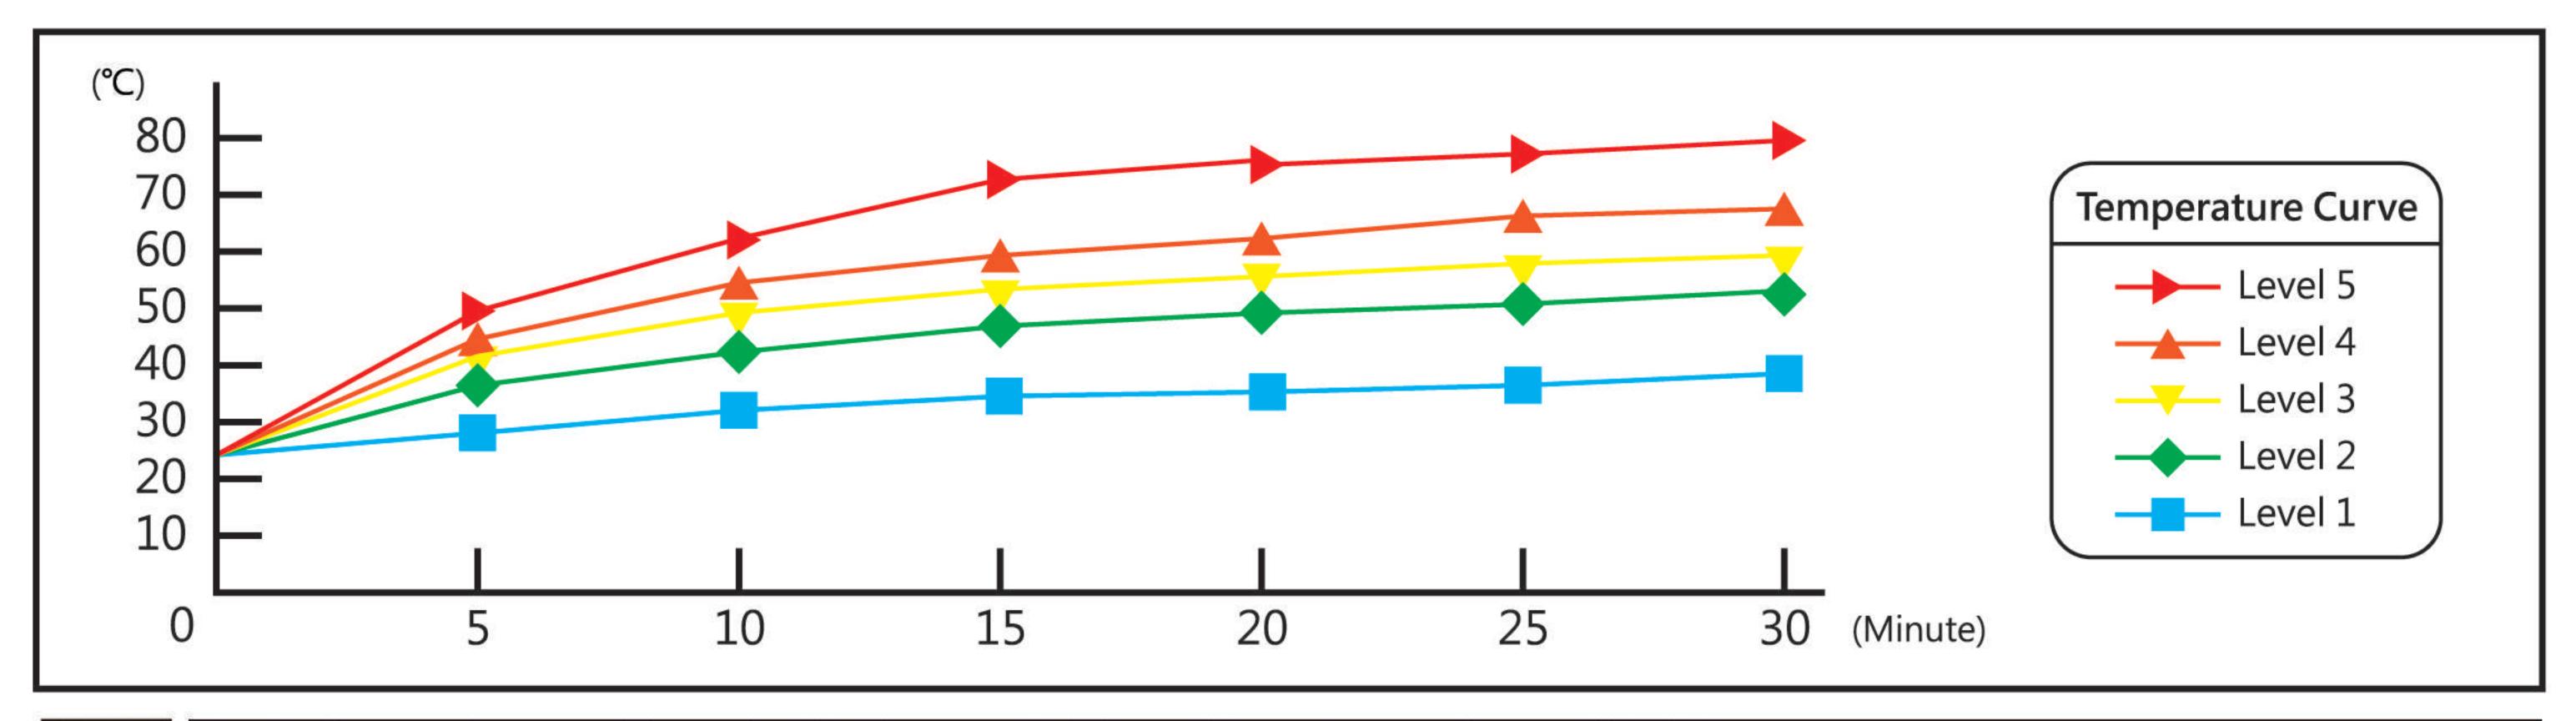


NOTE The testing environment is under 25 Degrees Celsius, with working voltage of 13.5V.

## 5 Low Battery Warning Instruction

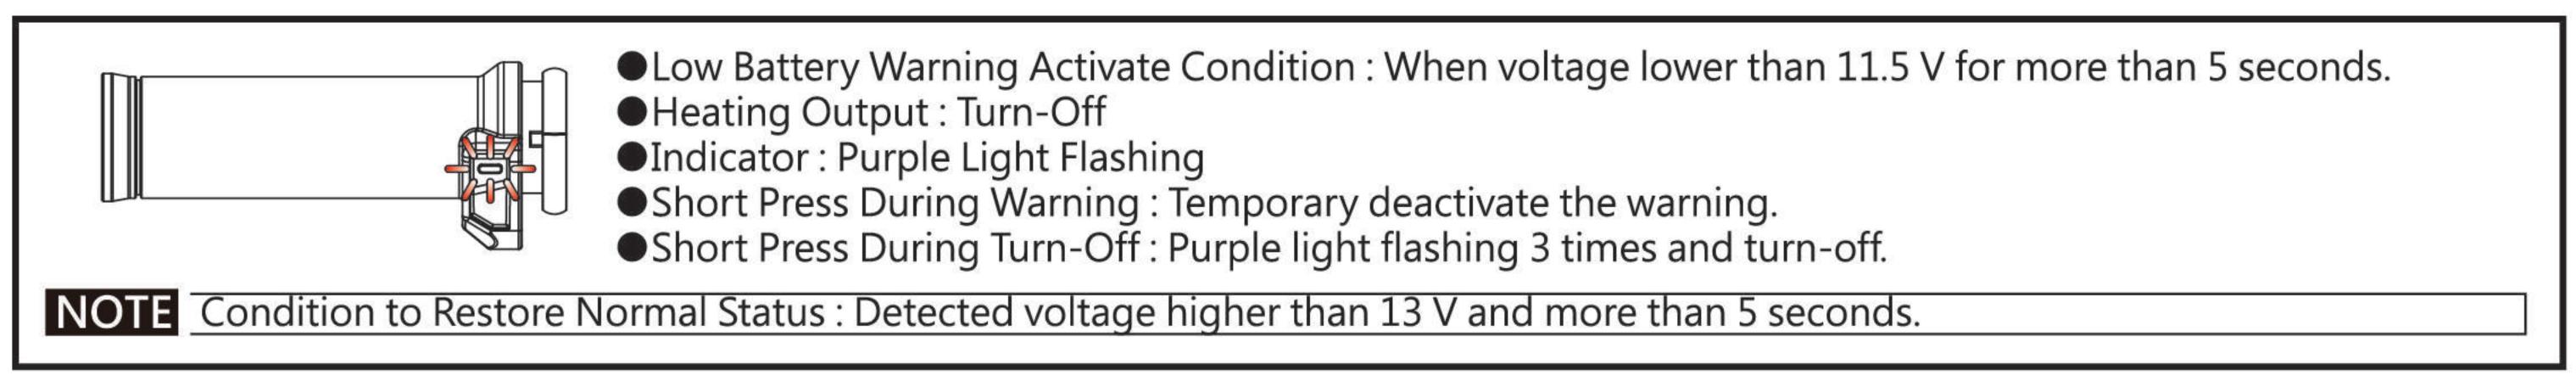

# 6 Caution

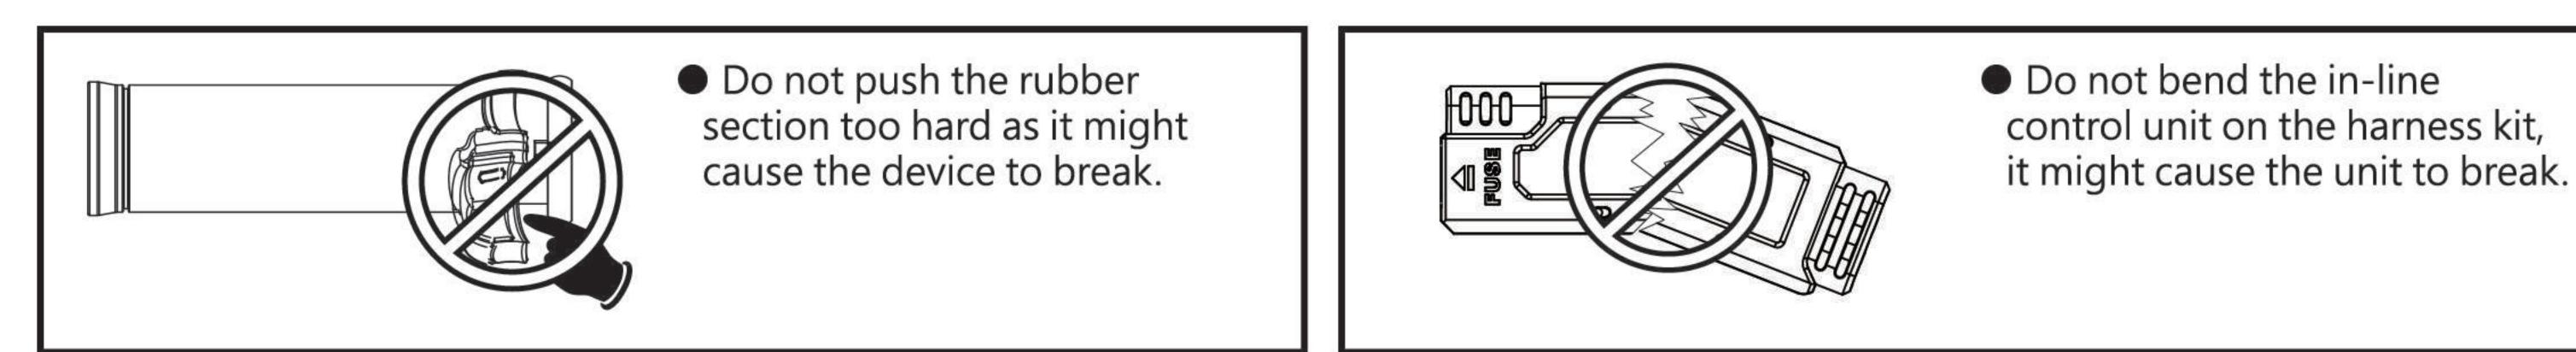

## 7 Troubleshooting

The following situation does not indicate malfunction of the heated grips. Check the following before taking it in for repair.

Trouble-1	Check item
No LED indicator lighting up.	<ul> <li>Could be the improper connection between the connectors.</li> <li>→ Check each connector about the connection.</li> <li>Could be the fuse that is burnt.</li> <li>→ Replace the 4A fuse by Terminal Car Fuse.</li> </ul>

XIf the problem couldn't be solved after above checking, contact the local dealer or KOSO directly.









Thank you for purchasing the Heated grips - for cable throttle.
 Before installing, please read the instructions carefully and keep them for future reference.


## Attention!

- The Heated grips are made to work with DC 12 V only.
- For installation, follow the steps described in the instructions. Any damage caused by wrong installation shall be imputed to the user.
- Do not break or modify the wires. To avoid a short circuit, don't pull on any wires when installing.
- The interior examination or maintenance should be executed by our professionals only.
- $\Lambda$  Some procedures must be followed to avoid damages caused by wrong installation.
- MARNING! Some procedures must be followed to avoid damages to yourself or the public.
- A CAUTION! Some procedures must be followed to avoid damages to the vehicle.
- READ CAREFULLY! If any information dealt with in the instructions remains unclear, seek professional assistance.

#### 1 Accessories

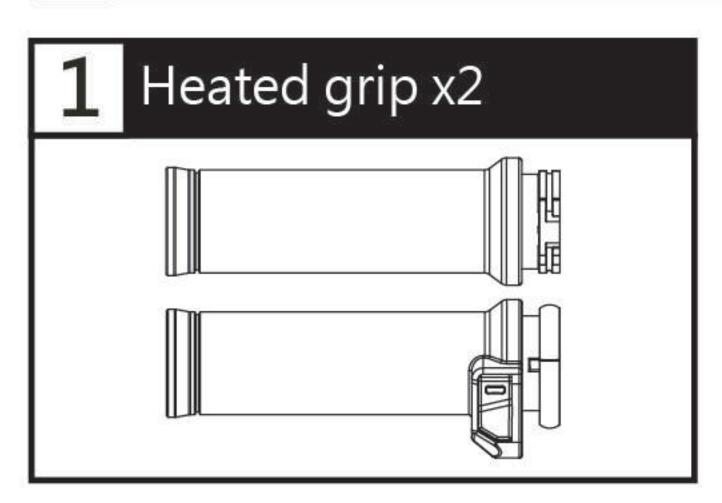

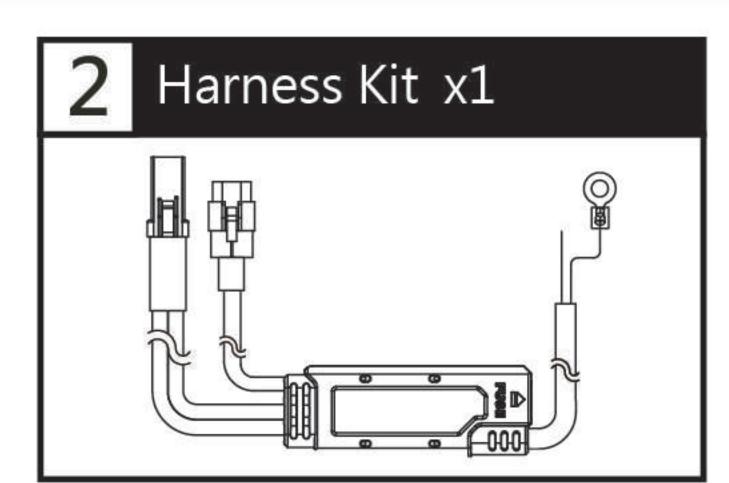

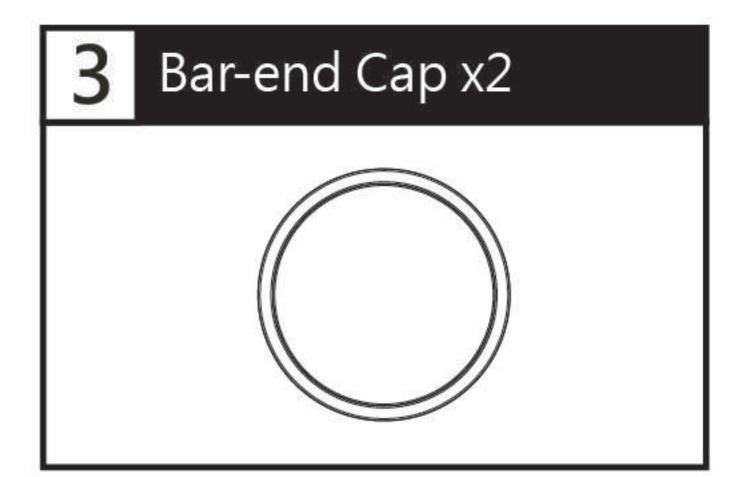


NOTE Contact your local distributor, if the items received in the box are not the same as the items listed above.

## 2-1 Practical installation instructions




Scan the QR code to connect the operation video


#### 2-2 Practical installation instructions

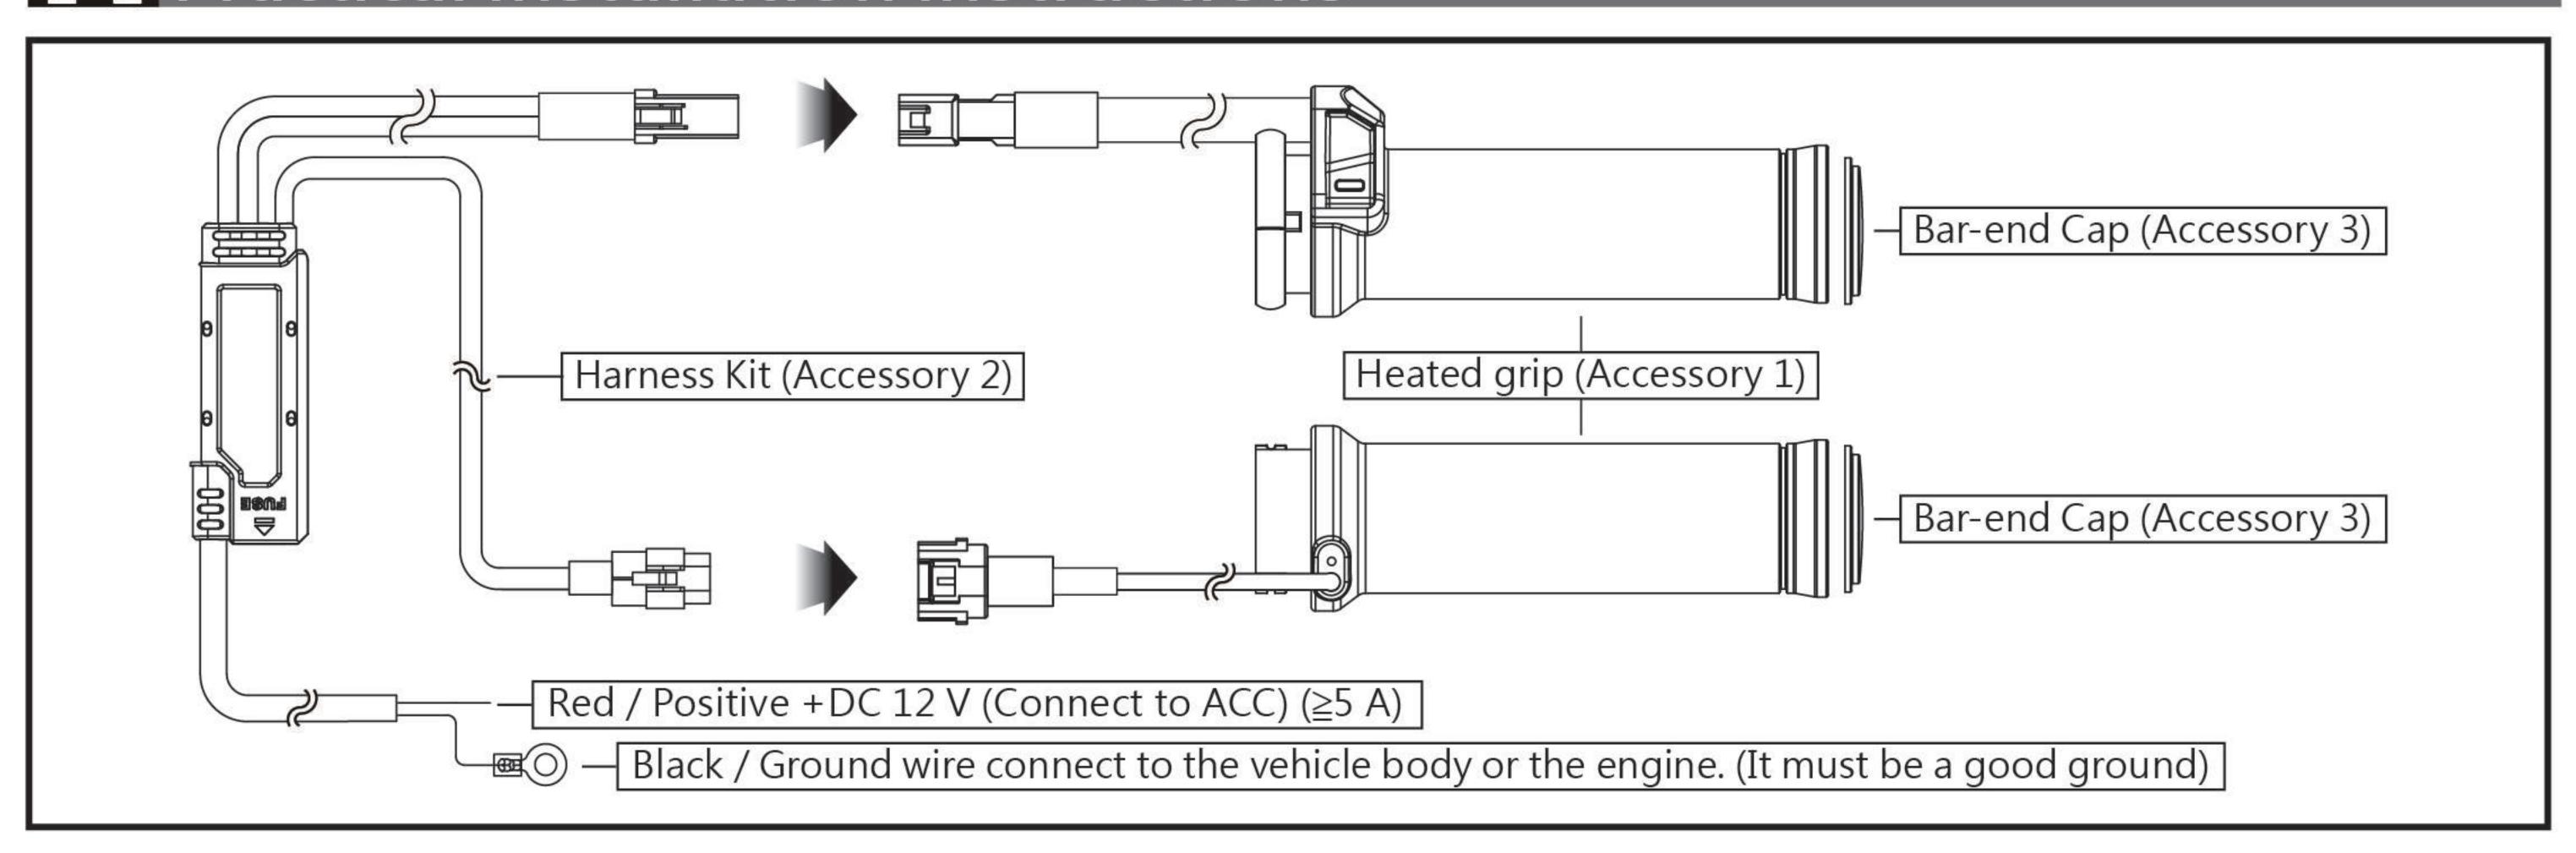

# 3 Heating Function Instruction

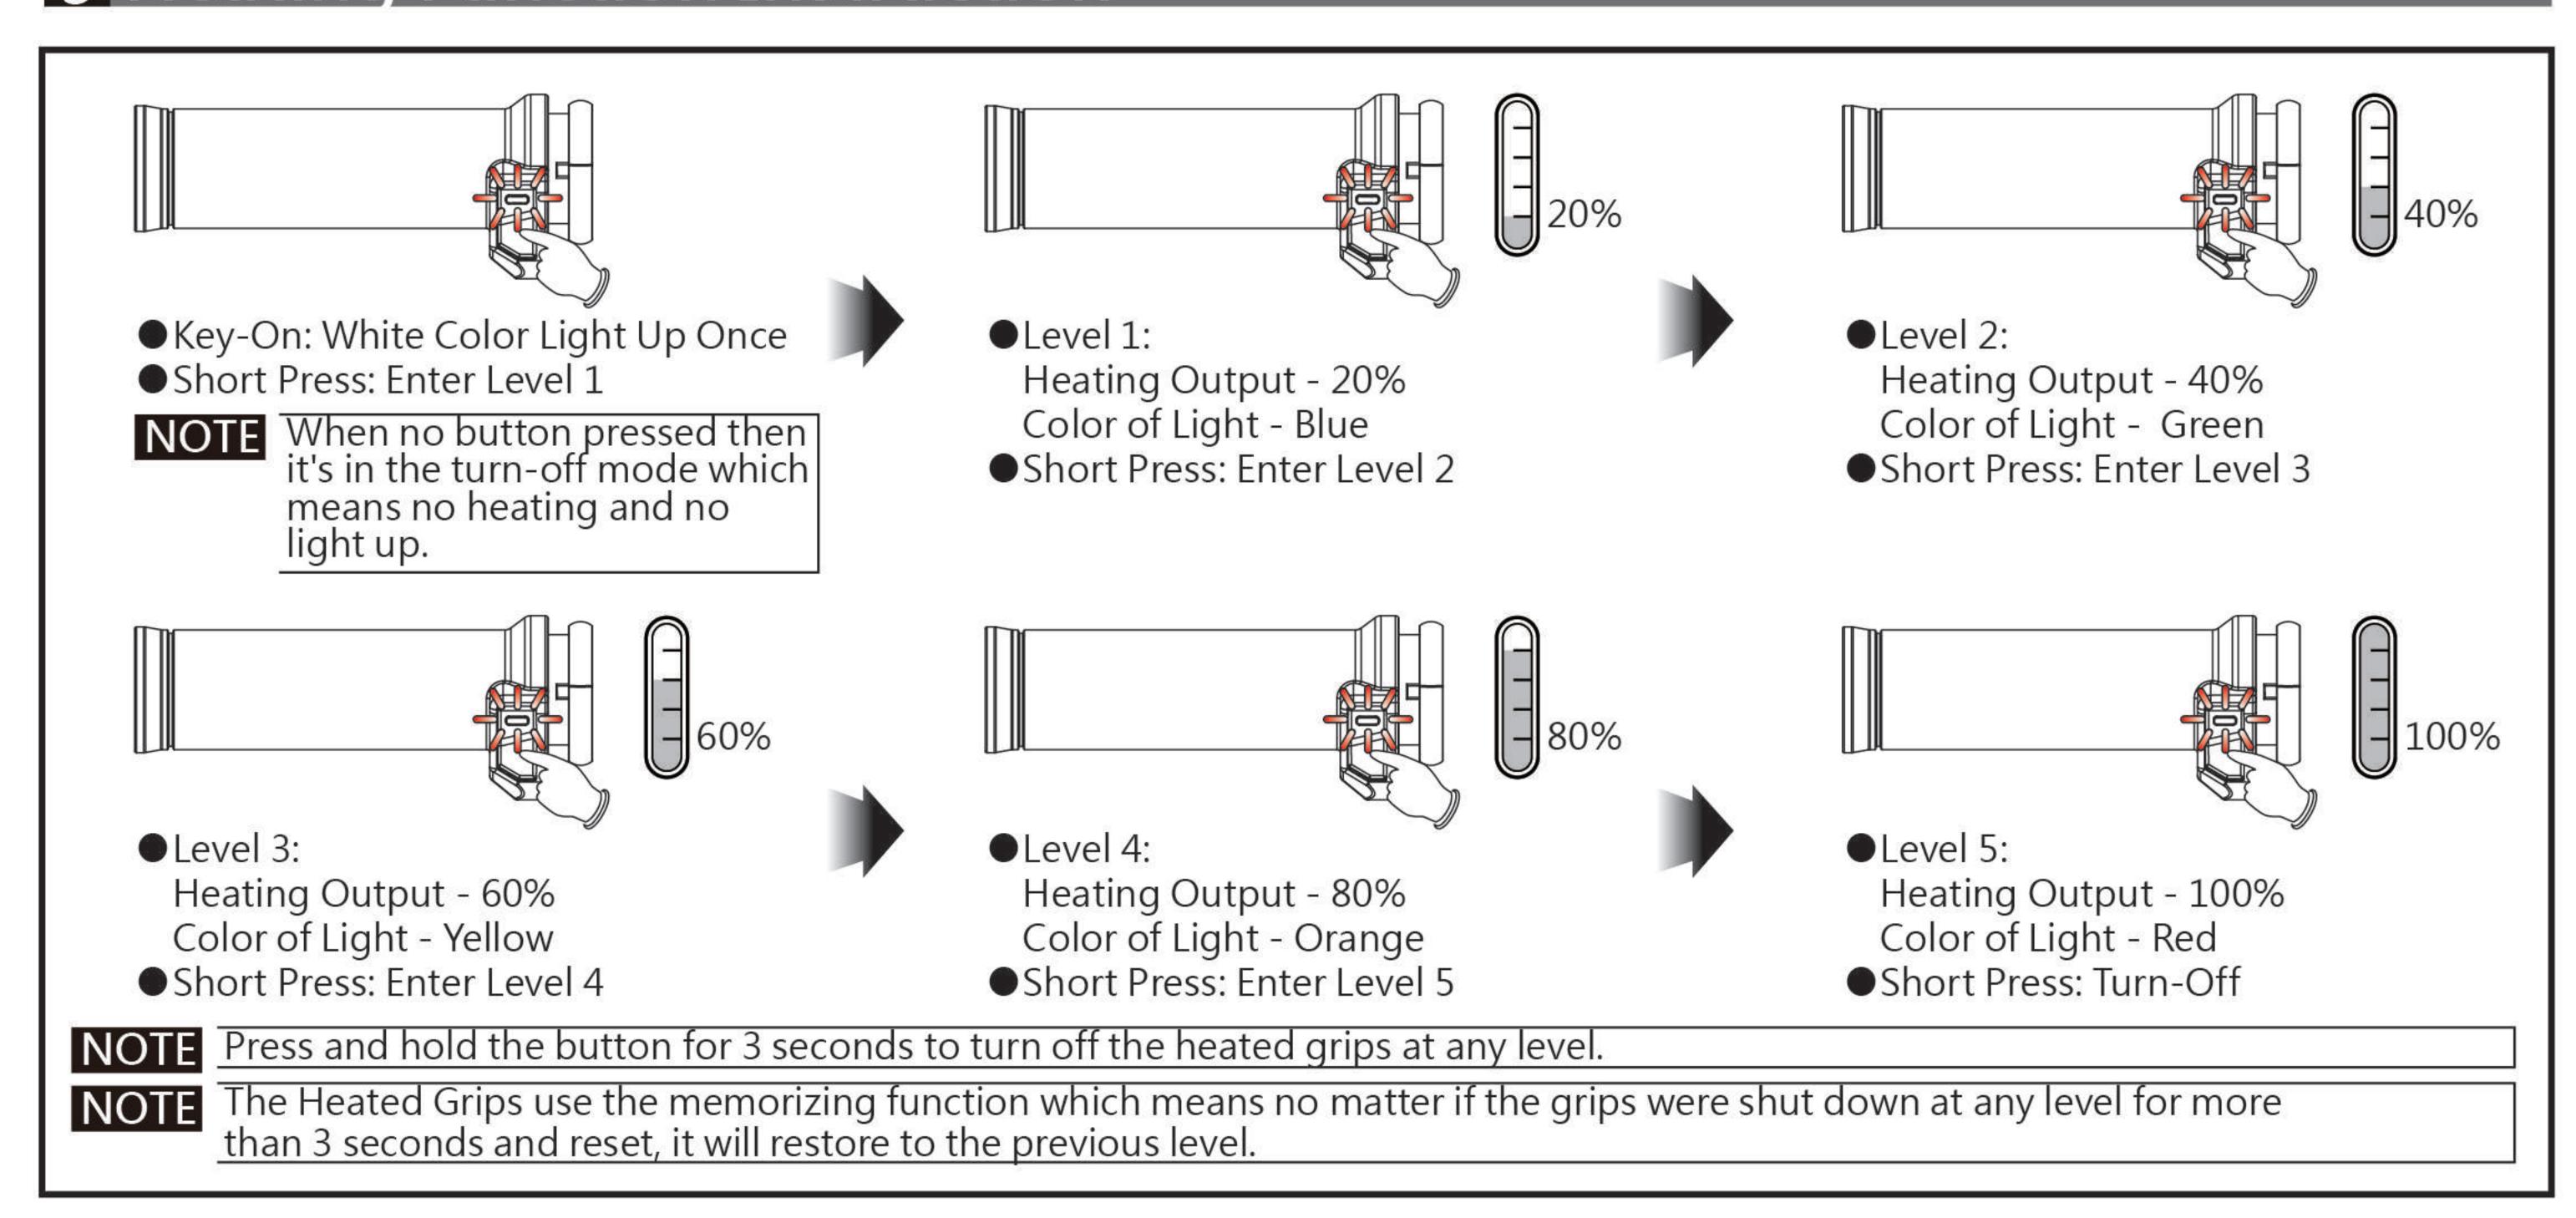


## 4 Heated Grip Testing Data

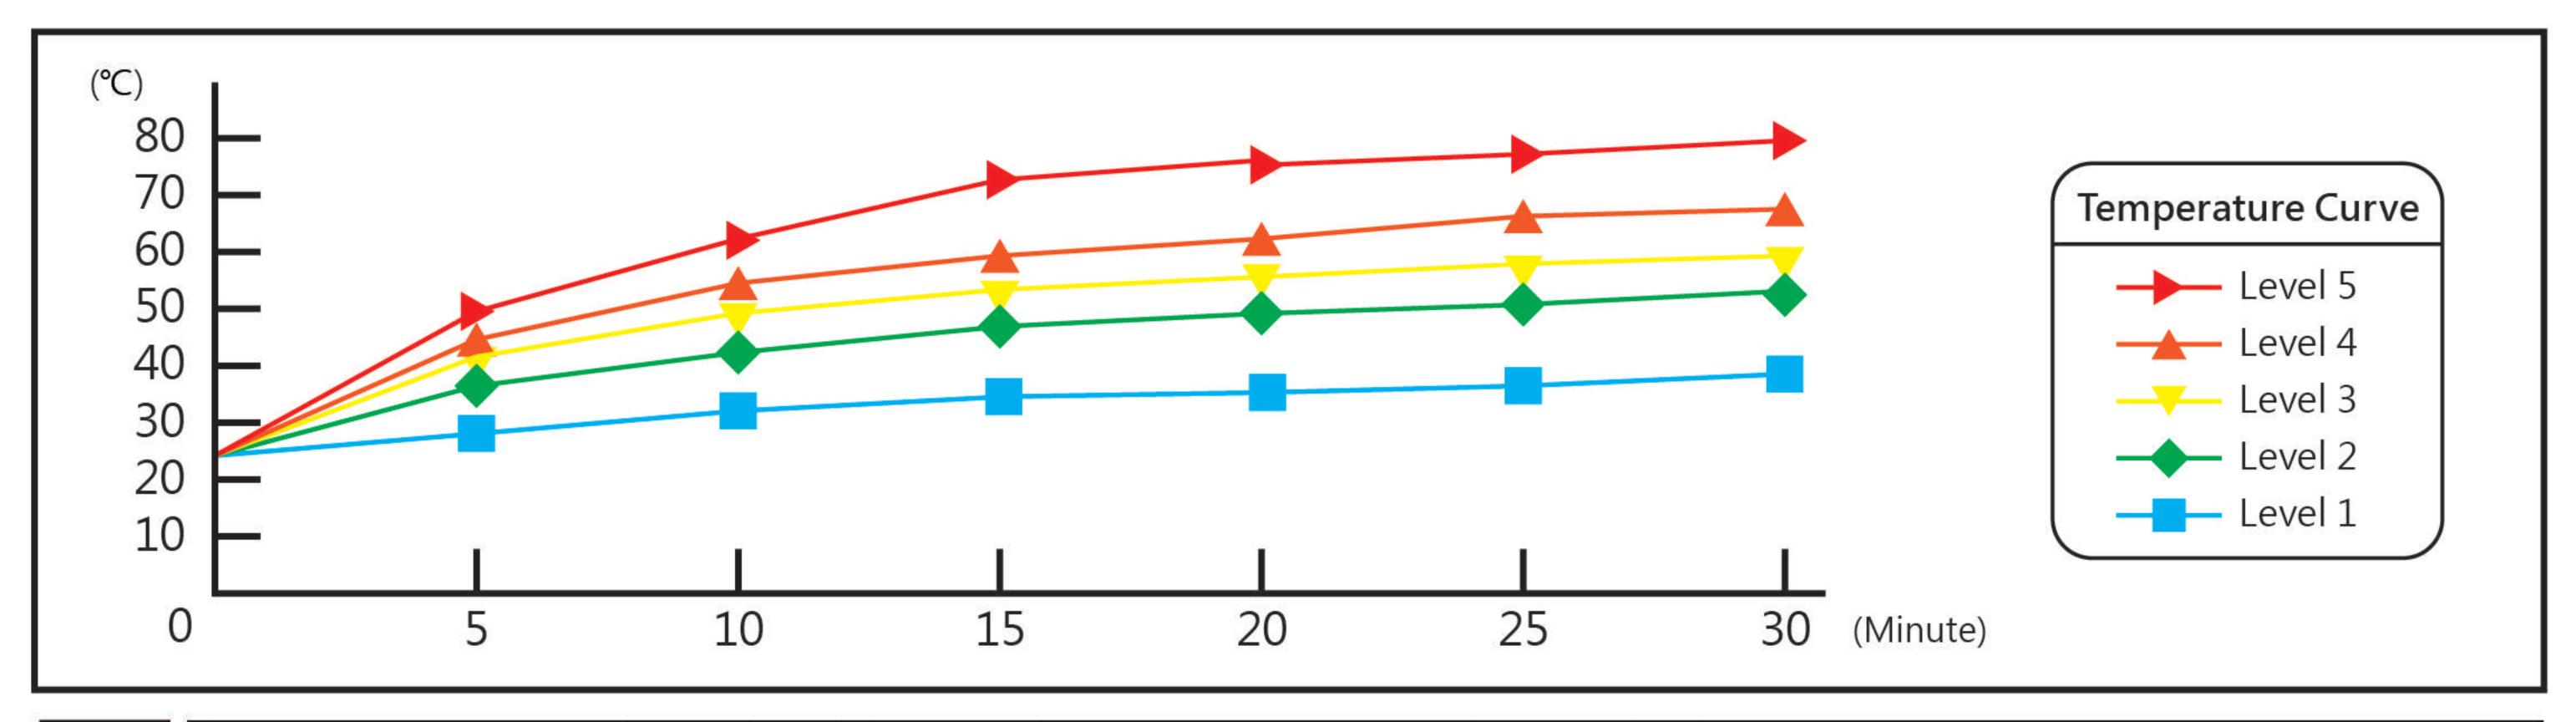


NOTE The testing environment is under 25 Degrees Celsius, with working voltage of 13.5V.

## 5 Low Battery Warning Instruction

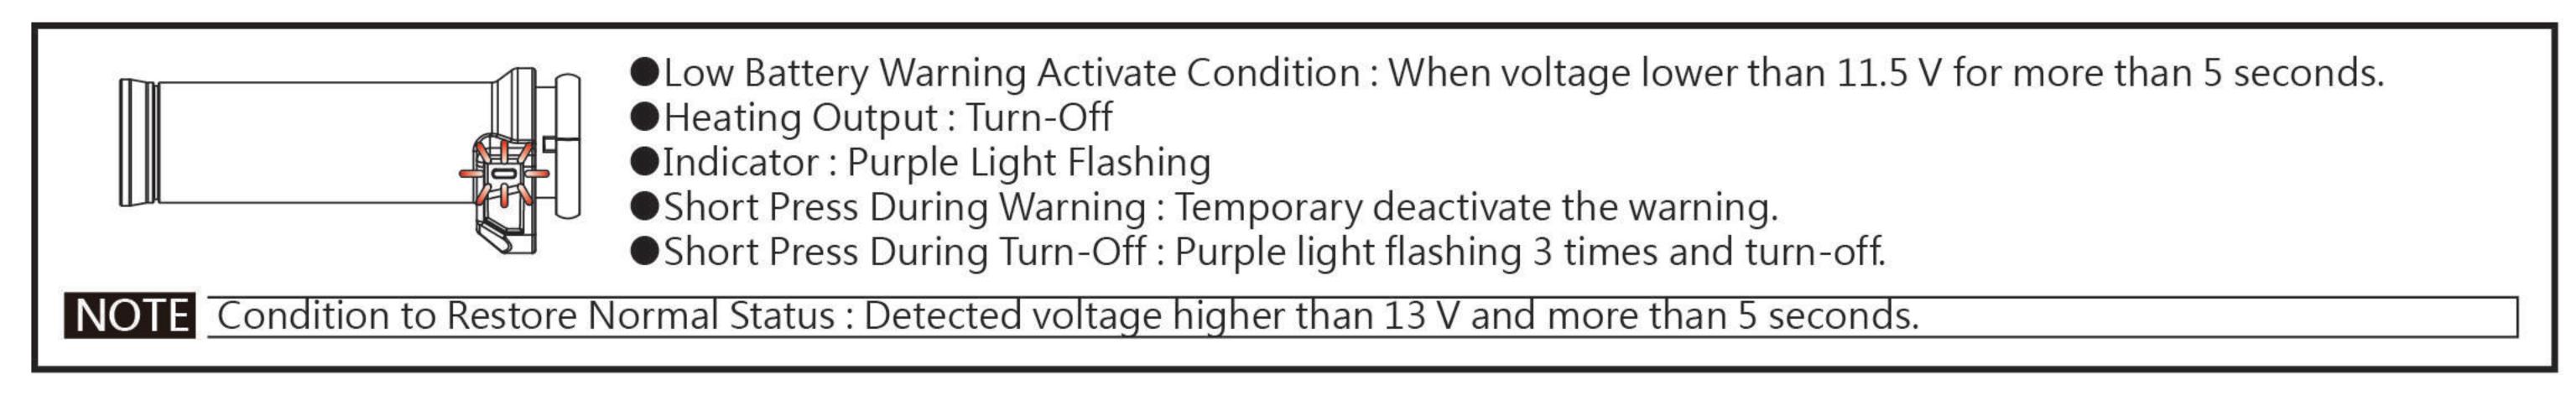

#### 6 Caution

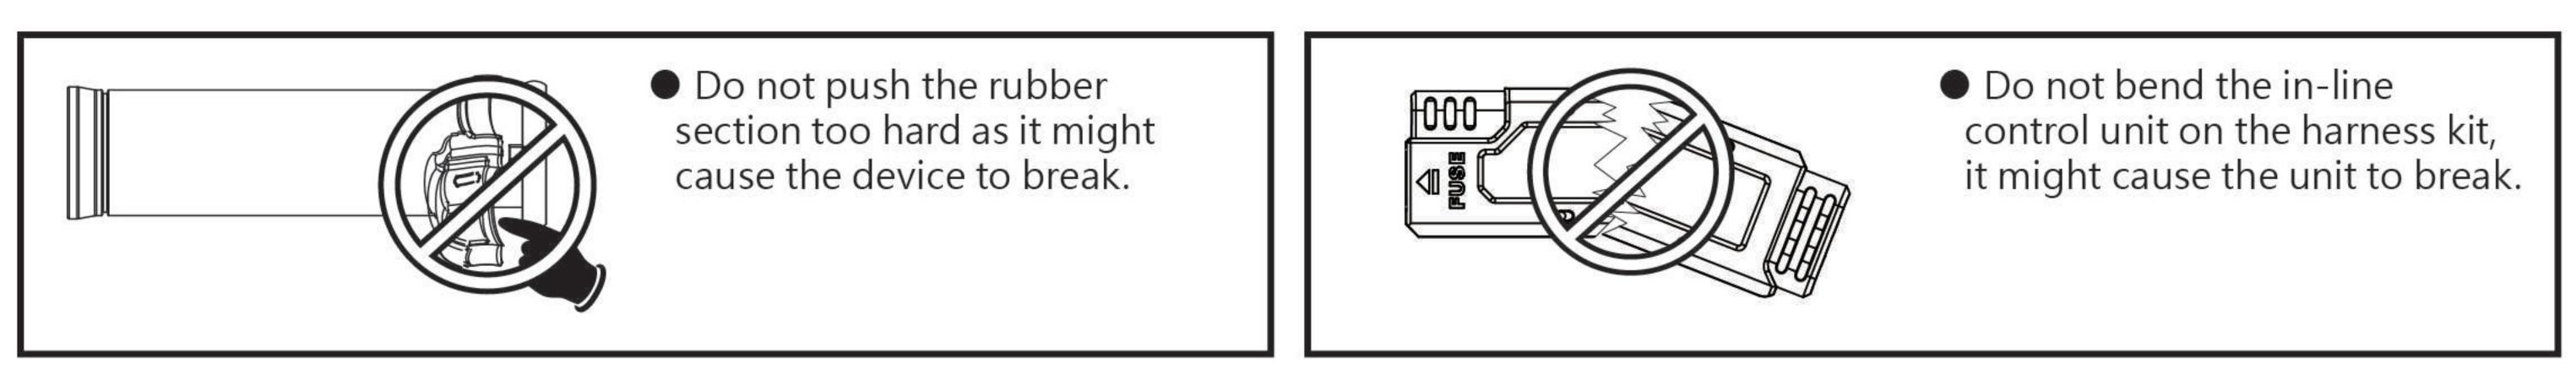

#### 7 Troubleshooting

The following situation does not indicate malfunction of the heated grips. Check the following before taking it in for repair.

Trouble-1	Check item
No LED indicator lighting up.	<ul> <li>Could be the improper connection between the connectors.</li> <li>→ Check each connector about the connection.</li> <li>Could be the fuse that is burnt.</li> <li>→ Replace the 4A fuse by Terminal Car Fuse.</li> </ul>

XIf the problem couldn't be solved after above checking, contact the local dealer or KOSO directly.